

Removing the ETM Cable from Behind the Starter Motor

WARNING: DO NOT cut the ETM electrical cable!

If the electrical cable "B" for the ETM is routed behind the starter motor, you will need to remove the bracket "A" at the back of the starter.

STEPS TO REMOVE THE ETM CABLE:

1. Remove the 12mm bolt "C"
2. Remove both 8mm nuts "D" (2 nuts in total)
3. Slide the ETM cable "B" towards the back of the starter.

